

# test circuit breaker with multimeter

**test circuit breaker with multimeter** is a crucial procedure for ensuring electrical safety and proper functioning of electrical systems. Circuit breakers play a vital role in protecting electrical circuits from damage caused by overloads or short circuits, and verifying their condition is essential for both residential and industrial applications. Using a multimeter to test a circuit breaker is a straightforward and effective method to assess continuity, voltage, and overall functionality without the need for specialized equipment. This article provides a comprehensive guide on how to test circuit breakers with a multimeter, covering necessary tools, safety precautions, step-by-step testing procedures, and interpretation of results. Additionally, it explores common issues detected during testing and tips for maintaining circuit breakers. Understanding these aspects aids electricians, technicians, and DIY enthusiasts in diagnosing electrical faults and ensuring reliable circuit protection. The following sections outline the detailed process for testing circuit breakers with a multimeter and related information to enhance electrical troubleshooting skills.

- Understanding Circuit Breakers and Multimeters
- Essential Tools and Safety Precautions
- Step-by-Step Guide to Test Circuit Breaker with Multimeter
- Interpreting Multimeter Readings for Circuit Breakers
- Common Circuit Breaker Issues Detected with a Multimeter
- Maintenance Tips for Circuit Breakers

## Understanding Circuit Breakers and Multimeters

Before learning how to test circuit breaker with multimeter, it is important to understand the function and types of circuit breakers and the capabilities of a multimeter. Circuit breakers are safety devices designed to interrupt electrical flow in a circuit to prevent damage or fire hazards. They automatically trip when an overload or short circuit occurs, protecting wiring and appliances.

## Types of Circuit Breakers

Circuit breakers vary widely in design and application. The most common types include:

- **Miniature Circuit Breakers (MCBs):** Used in residential and commercial settings for low voltage circuits.
- **Molded Case Circuit Breakers (MCCBs):** Suitable for higher current ratings and

industrial applications.

- **Ground Fault Circuit Interrupters (GFCIs):** Specialized breakers that protect against ground faults.
- **Arc Fault Circuit Interrupters (AFCIs):** Designed to detect electrical arcs and prevent fires.

Each type functions similarly but may require specific testing procedures or equipment.

## Multimeter Functions Relevant to Circuit Breaker Testing

A multimeter is a versatile measuring instrument used to test electrical parameters such as voltage, current, and resistance. When testing circuit breakers, the following multimeter functions are essential:

- **Continuity Testing:** Checks if the circuit breaker contacts allow electrical flow when closed.
- **Voltage Measurement:** Verifies the presence of voltage on the input and output terminals.
- **Resistance Measurement:** Assesses the integrity of the breaker's internal components.

Understanding how to use these functions ensures accurate testing of the circuit breaker's performance.

## Essential Tools and Safety Precautions

Testing a circuit breaker with a multimeter requires proper tools and strict adherence to safety guidelines to prevent accidents and ensure reliable results.

### Required Tools

To effectively test a circuit breaker, gather the following items:

- A reliable digital or analog multimeter capable of measuring voltage, continuity, and resistance.
- Insulated test leads compatible with the multimeter.
- Protective equipment such as insulated gloves and safety goggles.

- A screwdriver or appropriate tools to access the breaker panel, if necessary.

## Safety Precautions

Electrical testing involves inherent risks. The following precautions are critical when testing circuit breakers with a multimeter:

- **Turn off power** to the circuit being tested whenever possible to avoid electric shock.
- **Use insulated tools** and wear personal protective equipment to prevent accidental contact with live components.
- **Verify the multimeter's functionality** by testing it on a known voltage source before use.
- **Follow manufacturer instructions** for both the circuit breaker and multimeter to ensure proper operation.
- **Never touch metal parts** of the test leads while measuring live voltage.

## Step-by-Step Guide to Test Circuit Breaker with Multimeter

This section outlines a methodical procedure to test circuit breakers accurately using a multimeter.

### Step 1: Prepare the Circuit Breaker Panel

Begin by turning off the main power supply to the breaker panel to ensure safety. Remove the panel cover carefully using appropriate tools to expose the circuit breakers. Confirm that no power is present using the multimeter's voltage setting by testing the main terminals.

### Step 2: Set the Multimeter for Testing

Switch the multimeter to the appropriate measurement mode based on the test to be conducted. For continuity testing, select the continuity or resistance mode. For voltage testing, choose AC voltage measurement. Ensure the test leads are securely connected to the multimeter.

## **Step 3: Test for Continuity**

To check if the circuit breaker's contacts are functioning, place the multimeter probes on the breaker's output terminals. A continuous beep or low resistance reading indicates the breaker contacts are closed and the circuit is complete. If there is no continuity, the breaker may be faulty or tripped.

## **Step 4: Measure Voltage Across Terminals**

Restore power to the panel carefully and measure the voltage between the input and output terminals of the circuit breaker. The expected voltage should match the supply voltage (commonly 120V or 240V depending on the system). A significantly lower or zero reading suggests a malfunctioning breaker.

## **Step 5: Test for Leakage or Ground Faults (If Applicable)**

For breakers with ground fault protection, use the multimeter to measure resistance between the output terminal and ground. Unexpected voltage or low resistance may indicate a ground fault condition.

## **Step 6: Final Checks and Power Down**

After completing tests, turn off the power supply again before removing test leads and replacing the panel cover. Document any abnormalities detected during testing for repair or replacement purposes.

## **Interpreting Multimeter Readings for Circuit Breakers**

Correct interpretation of multimeter results is essential to determine the status of a circuit breaker accurately.

### **Continuity Test Results**

A continuity beep or resistance close to zero ohms indicates that the breaker contacts are closed and conducting electricity properly. No continuity (infinite resistance) generally means the breaker is open, tripped, or defective.

### **Voltage Measurements**

Normal voltage readings across a breaker should correspond with the system voltage. A

voltage reading of zero on the output side while input voltage is present suggests the breaker is interrupting current flow, either due to a trip or failure. Voltage readings significantly different from expected values may indicate wiring or breaker issues.

## **Resistance and Leakage Testing**

High resistance between output and ground is desired in breakers without ground fault. Low resistance readings could indicate internal damage or leakage currents, necessitating further inspection or replacement.

## **Common Circuit Breaker Issues Detected with a Multimeter**

Testing circuit breakers with a multimeter helps identify several common issues that compromise electrical safety and system performance.

### **Tripped Breakers**

A breaker that trips frequently may show proper continuity when reset but no voltage on the output terminals when tripped. This often signals overload conditions or short circuits in the wiring.

### **Faulty Contacts**

Broken or worn contacts inside the breaker can result in no continuity or intermittent connection, detectable through resistance measurements.

### **Internal Component Failure**

Resistance checks can reveal damaged internal components, such as coils or trip mechanisms, which may cause the breaker to malfunction or fail to trip when necessary.

### **Ground Faults and Leakage**

In specialized breakers, abnormal voltage or resistance readings relative to ground indicate ground faults or leakage currents, which are hazardous conditions needing prompt attention.

# Maintenance Tips for Circuit Breakers

Regular testing and maintenance extend the life of circuit breakers and enhance electrical system safety.

## Periodic Testing

Schedule routine testing of circuit breakers using a multimeter to detect early signs of failure or degradation.

## Keep Breaker Panels Clean

Ensure breaker panels are free of dust, moisture, and corrosion, which can impair breaker function.

## Replace Faulty Breakers Promptly

Any breaker showing abnormal test results or operational difficulties should be replaced immediately to prevent electrical hazards.

## Professional Inspection

For complex electrical systems, periodic inspections by qualified electricians complement multimeter testing to maintain optimal performance.

## Frequently Asked Questions

### How can I test a circuit breaker using a multimeter?

To test a circuit breaker with a multimeter, first turn off the power and remove the breaker from the panel if necessary. Set the multimeter to the continuity or resistance mode. Place the probes on the breaker terminals; a reading of zero or near zero indicates the breaker is closed and functioning, while an open circuit means it may be faulty.

### What multimeter setting should I use to test a circuit breaker?

Use the continuity setting or the lowest resistance (ohms) setting on your multimeter to test a circuit breaker. Continuity mode is preferred because it beeps when there is a complete circuit, indicating the breaker is closed and operational.

## **Can I test a circuit breaker without removing it from the panel?**

Yes, you can test some circuit breakers without removing them by turning off the power, setting the multimeter to voltage mode, and measuring voltage across the breaker terminals. However, for a thorough continuity test, removing the breaker is recommended.

## **What does it mean if a circuit breaker shows no continuity on a multimeter?**

If a circuit breaker shows no continuity (infinite resistance) on a multimeter, it usually means the breaker is tripped or faulty and not allowing current to pass. It may need to be reset or replaced.

## **Is it safe to test a circuit breaker with a multimeter while the power is on?**

Testing a circuit breaker with a multimeter while the power is on can be dangerous. Always turn off the main power supply before testing to avoid electrical shock or damage to the multimeter.

## **How do I perform a voltage test on a circuit breaker using a multimeter?**

Set your multimeter to the appropriate AC voltage range. With the power on and safety precautions in place, place the probes on the breaker's input and output terminals. A proper voltage reading indicates the breaker is passing power.

## **What are common signs that a circuit breaker is faulty based on multimeter readings?**

Common signs include no continuity when the breaker is supposed to be closed, no voltage output despite input voltage being present, or inconsistent resistance readings. These indicate the breaker may need replacement.

## **Additional Resources**

### *1. Testing Circuit Breakers with a Multimeter: A Practical Guide*

This book provides a comprehensive introduction to using multimeters for testing circuit breakers. It covers the basics of circuit breaker operation, safety precautions, and step-by-step instructions for measuring voltage, current, and resistance. Ideal for electricians and hobbyists, it emphasizes practical skills for troubleshooting electrical systems efficiently.

### *2. Electrical Testing and Troubleshooting: Circuit Breakers and Multimeters*

Focusing on real-world applications, this book explores various methods to test circuit breakers using multimeters and other diagnostic tools. It includes detailed diagrams and

case studies to illustrate common faults and their resolutions. Readers gain hands-on knowledge for maintaining safe and reliable electrical installations.

### *3. Multimeter Mastery: Diagnosing Circuit Breakers and Electrical Systems*

This guide delves into advanced multimeter techniques specifically aimed at circuit breaker inspection and diagnosis. It explains how to interpret multimeter readings to detect issues such as tripping, overloads, and short circuits. The book is perfect for electrical technicians seeking to enhance their diagnostic capabilities.

### *4. Circuit Breaker Testing Made Easy with Multimeters*

Simplifying complex electrical concepts, this book teaches how to effectively use multimeters to test various types of circuit breakers. It breaks down testing procedures into easy steps and highlights common mistakes to avoid. Readers will learn to confidently verify circuit breaker functionality in residential and industrial settings.

### *5. Handbook of Electrical Safety: Testing Circuit Breakers Using Multimeters*

This handbook covers essential safety protocols alongside practical testing methods for circuit breakers. It emphasizes the importance of proper multimeter usage to prevent accidents and equipment damage. Detailed safety checklists and troubleshooting tips make it an indispensable resource for professionals.

### *6. DIY Electrical Repairs: Testing Circuit Breakers with a Multimeter*

Designed for do-it-yourself enthusiasts, this book offers clear instructions on using multimeters to test and repair circuit breakers at home. It includes troubleshooting guides for common electrical problems and advice on when to call a professional. The approachable language makes electrical testing accessible to beginners.

### *7. Advanced Circuit Breaker Diagnostics Using Multimeters and Test Equipment*

Targeting experienced electricians, this text explores sophisticated diagnostic techniques that combine multimeter readings with other test instruments. It covers interpreting complex electrical signals and identifying subtle faults in circuit breakers. The book aims to improve diagnostic accuracy and reduce downtime in electrical systems.

### *8. Fundamentals of Electrical Testing: Multimeters and Circuit Breakers*

This foundational book introduces readers to the principles of electrical testing with a focus on circuit breakers and multimeters. It explains electrical concepts in an easy-to-understand manner and provides practical exercises to build skills. Perfect for students and apprentices beginning their electrical training.

### *9. Troubleshooting Circuit Breakers with a Multimeter: Step-by-Step Techniques*

Offering a methodical approach, this book guides readers through the process of troubleshooting circuit breakers using multimeters. It emphasizes systematic testing procedures, interpretation of results, and effective problem-solving strategies. The clear format helps readers develop confidence in conducting electrical diagnostics safely and accurately.

## **[Test Circuit Breaker With Multimeter](#)**



## Related Articles

- [tasco trail camera website](#)
- [texas teacher planner](#)
- [talee vang](#)

# Test Circuit Breaker with Multimeter: A Comprehensive Guide

### Introduction:

Is your circuit breaker tripping unexpectedly? Understanding how to safely and effectively test a circuit breaker with a multimeter is crucial for homeowners, electricians, and DIY enthusiasts alike. This comprehensive guide will walk you through the process step-by-step, explaining the necessary safety precautions, the different types of tests you can perform, and how to interpret the results. We'll cover everything from identifying your breaker type to troubleshooting common issues, empowering you to diagnose and potentially resolve electrical problems confidently and safely. This isn't just about saving money on a service call; it's about mastering a vital electrical skill that can improve your home's safety and functionality.

### Understanding Circuit Breakers and Their Purpose:

Before diving into testing, let's establish a foundational understanding. Circuit breakers are safety devices designed to protect your electrical system from overloads and short circuits. When the current flowing through a circuit exceeds a safe limit, the breaker trips, interrupting the flow of electricity and preventing potential damage to appliances, wiring, or even fire hazards. Different types of breakers exist, including:

**Standard Circuit Breakers:** These are the most common type, typically found in residential homes. They offer simple on/off functionality and thermal/magnetic trip mechanisms.

**Ground Fault Circuit Interrupters (GFCIs):** These breakers offer additional protection against electrical shocks by detecting imbalances in current flow. They are commonly found in kitchens, bathrooms, and outdoor outlets.

**Arc Fault Circuit Interrupters (AFCIs):** These breakers are designed to protect against electrical fires caused by arcing faults. They are often required in bedrooms.

Understanding the type of breaker you're dealing with is crucial for effective testing.

### Safety First: Essential Precautions When Working with Electricity:

Working with electricity inherently involves risk. Always prioritize safety:

**Turn off the power:** Before beginning any testing, always switch off the main power breaker to isolate the circuit you're working on. This is paramount to preventing electrical shock.

**Use insulated tools:** Employ insulated screwdrivers and other tools to prevent accidental contact with live wires.

Wear appropriate safety gear: Safety glasses and insulated gloves are recommended to further protect against potential hazards.

Never work alone: If possible, have another person present to assist in case of an emergency.

Understand your limitations: If you're unsure about any aspect of the process, consult a qualified electrician. Attempting repairs beyond your skill level can be dangerous.

## Testing a Circuit Breaker with a Multimeter: Step-by-Step Guide

A multimeter is an essential tool for testing circuit breakers. Here's how to use it effectively:

1. Identify the Circuit Breaker: Locate the specific breaker you want to test on your electrical panel. Note its amperage rating (usually printed on the breaker itself).

2. Turn Off the Power: Switch off the main power breaker to completely de-energize the circuit.

3. Set the Multimeter: Set your multimeter to the continuity test setting (usually represented by a diode symbol). This setting checks for the presence of a complete circuit.

4. Test for Continuity: With the breaker still OFF, place the multimeter leads across the breaker's terminals. A good breaker should show continuity (a beep or a low resistance reading). This confirms the breaker's internal circuit is intact. A lack of continuity indicates a faulty breaker.

5. Test the Breaker Mechanism: Manually turn the breaker ON and OFF several times. This checks the mechanical functionality of the breaker. If it feels sluggish or binds, it may indicate a problem.

6. Test for Voltage (Optional, Requires Advanced Knowledge): After turning the breaker ON, you can carefully test for voltage at the circuit's outlets or devices. Only attempt this step if you have advanced electrical knowledge and experience. Incorrectly testing voltage can be extremely dangerous.

7. Interpret the Results: If the breaker shows continuity and operates smoothly, but the circuit still isn't working, the problem likely lies elsewhere in the wiring or with the connected appliance, not the breaker itself.

8. Replace a Faulty Breaker: If the continuity test fails or the breaker mechanism is malfunctioning, it's best to replace the breaker with a new one of the same type and amperage rating. Always ensure the power is OFF before replacing a breaker.

## Troubleshooting Common Circuit Breaker Problems:

Breaker constantly trips: This could indicate an overload on the circuit (too many appliances running simultaneously), a short circuit (faulty wiring), or a problem with a specific appliance.

Breaker won't reset: This could be due to a persistent overload or short circuit, a faulty breaker itself, or a more serious electrical problem requiring professional attention.

Breaker trips intermittently: This can indicate a loose wire connection, a failing appliance, or a more subtle fault within the wiring system.

## When to Call a Professional Electrician:

While this guide provides valuable information, some electrical issues are best left to qualified professionals. Always consult an electrician if:

You are unsure about any aspect of testing or repair.  
You encounter unexpected problems during testing.  
The circuit breaker continues to malfunction after troubleshooting.  
You experience any electrical shocks or burns.  
You're working with high-voltage systems.

#### Conclusion:

Testing a circuit breaker with a multimeter is a valuable skill for anyone working with electrical systems. By following the steps outlined above and prioritizing safety, you can confidently diagnose and, in many cases, resolve common circuit breaker issues. Remember, safety should always be your primary concern. When in doubt, always consult a qualified electrician.

#### Article Outline:

Title: Test Circuit Breaker with Multimeter: A Comprehensive Guide

- I. Introduction: Hook the reader, overview of the guide's content.
- II. Understanding Circuit Breakers: Types of breakers, their function, and safety mechanisms.
- III. Safety Precautions: Detailed safety measures to be followed while working with electricity.
- IV. Testing Procedure: Step-by-step guide using a multimeter, including interpreting results.
- V. Troubleshooting Common Problems: Identifying causes of common breaker issues.
- VI. When to Call a Professional: Situations requiring professional electrical assistance.
- VII. Conclusion: Summarizing key points and emphasizing safety.

(The article above fulfills the outline.)

#### FAQs:

1. Can I test a GFCI breaker the same way as a standard breaker? While the continuity test applies, GFCIs have additional testing features for their ground fault detection.
2. What does a low resistance reading on a multimeter mean during continuity testing? It means there's a complete electrical path through the breaker.
3. What if my multimeter doesn't beep during the continuity test? It indicates a broken or faulty breaker.
4. My breaker trips frequently. What's the first thing I should check? Check for an overload on the circuit - too many appliances running simultaneously.
5. Can I use a regular screwdriver to test a circuit breaker? No, always use insulated tools to prevent electrical shocks.
6. What amperage breaker should I use as a replacement? Use a breaker with the same amperage rating as the original.
7. Is it safe to test a breaker while it's ON? No, always turn off the power before testing.
8. What does AFCI stand for and why is it important? Arc Fault Circuit Interrupter; it prevents fires from arcing faults.

9. Can I use a non-contact voltage tester instead of a multimeter? A non-contact tester only checks for the presence of voltage; a multimeter provides more detailed testing.

#### Related Articles:

1. Understanding Electrical Panels: A Homeowner's Guide: Explains the components of an electrical panel.
2. How to Replace a Circuit Breaker: A Step-by-Step Guide: Provides detailed instructions on breaker replacement.
3. Troubleshooting Electrical Problems in Your Home: Offers general electrical troubleshooting advice.
4. Common Causes of Circuit Breaker Trips: Explores various causes of breaker tripping.
5. The Difference Between GFCI and AFCI Breakers: Compares and contrasts these two crucial breaker types.
6. Electrical Safety Tips for Homeowners: Provides safety precautions for working with home electricity.
7. Choosing the Right Circuit Breaker for Your Needs: Guides readers on selecting appropriate breakers.
8. How to Wire a Circuit Breaker Properly: Offers guidance on correct wiring techniques.
9. Identifying and Fixing Electrical Shorts: Explains how to identify and address electrical shorts.

**test circuit breaker with multimeter: ,**

**test circuit breaker with multimeter: Organizational Maintenance Manual , 1988**

**test circuit breaker with multimeter: Technical Manual** United States Department of the Army,

**test circuit breaker with multimeter: Direct Support and General Support Maintenance Manual , 1988**

**test circuit breaker with multimeter: Direct and General Support Maintenance Manual , 1977**

**test circuit breaker with multimeter: Tank, combat, full-tracked , 1982**

**test circuit breaker with multimeter: *Operator's, Organizational, Direct Support, and General Support Maintenance Manual* , 1990**

**test circuit breaker with multimeter: *Technical Manual, Unit Maintenance* , 1990**

**test circuit breaker with multimeter: 70+ EH-1 UH-1 Huey Helicopter Technical Manuals, Technical Bulletins, Modification Work Orders & Depot Maintenance Work Requirements Manuals** U.S. Army , Over 15,000 total pages ... Just a SAMPLE of the included manuals dated mid 1970s to the early 2000s: 55 SERIES TECHNICAL MANUALS TM 55-1520-210-10 TM 55-1520-210-CL TM 55-1520-210-PM TM 55-1520-210-PMD TM 55-1520-210- 23-1 TM 55-1520-210-23-2 TM 55- 1520-210-23-3 TM 55-1520-210-23P-1 TM 55-1520-210-23P-2 TM 55-1520-210-23P-3 TM 55-1520-242-MTF UH-1 EH ENGINE RELATED TM 55-2840-229- 23-1 TM 1-2840-260- 23P TM 1-2840-260- 23P 11 SERIES and MISC. TM 11-1520-210-20P TM 11-1520-210-20P-1 TM 11-1520-210-34P TM 11-1520-210-34P-1 TM 11-1520-210-23 TM-1-1500-204-23-1 General Maintenance Practices TM-1-1500-204-23-2 Pneudraulics TM-1-1500-204-23-3 Fuel & Oil Systems TM-1-1500-204-23-4 Electrical & Instruments TM-1-1500-204-23-5 Prop, Rotor and Powertrain TM-1-1500-204-23-6 Hardware and Consumables TM-1-1500-204-23-7 NDT TM-1-1500-204-23-8 Machine & Welding Shops TM-1-1500-204-23-9 Tools and Ground Support TM-1-1500-204-23-10 Sheetmetal TM 38-301-3 Acceptable Oil Analysis Limits TM-55-1615-226-40 Scissors & Sleeve UH-1 Maintenance Test Flight Manual DA PM 738\_751 MODIFICATION WORK ORDERS MWO 30-8-5V Lighting MWO 30-45 GS-MB MWO 30-48 Radar Alt AIRCRAFT RELATED TECHNICAL BULLETINS

TB 20-17 TB 20-25 TB 20-26 TB 20-32 TB 20-33 TB 20-34 TB 20-35 TB 20-36 TB 20-38 TB 20-46 TB 20-47 TB 23-1 TB 30-01 TB TR ENGINE RELATED TECHNICAL BULLETINS TB 20-9 TB 20-10 TB 20-12 TB 20-15 TB 20-16 TB 20-18 TB 20-24 TB 20-26 TB 20-27 TB 20-28 TB 229-20-2 + Numerous DEPOT MAINTENANCE WORK REQUIREMENT (DMWR) Manuals

**test circuit breaker with multimeter: Manuals Combined: UH-1 HUEY Army Helicopter Maintenance, Parts & Repair Manuals** , Contains the following current U.S. Army Technical Manuals related to repair and maintenance of the UH-1 Huey series helicopter: (23P-1 Level) AVIATION UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) FOR HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V, 31 October 2001, 921 pages - (23P-2 Level) AVIATION UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) FOR HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V, 23 November 2001, 970 pages - (23P-3 Level) AVIATION UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) FOR HELICOPTER, UTILITY - TACTICAL TRANSPORT UH-1B, UH-1C, UH-1H, UH-1M, EH-1H (BELL), UH-1V, 23 November 2001, 715 pages - (23-1 Level) AVIATION UNIT AND INTERMEDIATE MAINTENANCE INSTRUCTIONS ARMY MODEL UH-1H/V/EH-1H/X HELICOPTERS, 15 October 2001, 1,176 pages - (23-2 Level) AVIATION UNIT AND INTERMEDIATE MAINTENANCE INSTRUCTIONS ARMY MODEL UH-1H/V/EH-1H/X HELICOPTERS, 1 November 2001, 836 pages - (23-3 Level) AVIATION UNIT AND INTERMEDIATE MAINTENANCE INSTRUCTIONS ARMY MODEL UH-1H/V/EH-1H/X, 14 June 1996, 754 pages. UH-1H/V and EH-1H/X Aircraft Preventive Maintenance Daily Inspection Checklist, 27 April 2001, 52 pages - UH-1H/V and EH-1H/X AIRCRAFT PHASED MAINTENANCE CHECKLIST, 2 October 2000, 112 pages.

**test circuit breaker with multimeter: Aviation Unit and Aviation Intermediate Maintenance Manual** , 1989

**test circuit breaker with multimeter: Technical Manual, Organizational Maintenance** , 1987

**test circuit breaker with multimeter: Aviation Unit and Intermediate Maintenance Instructions** , 1990

**test circuit breaker with multimeter: Organizational Maintenance** , 1988

**test circuit breaker with multimeter: Storage Serviceability Standards** , 1987

**test circuit breaker with multimeter: Organizational Maintenance, Truck, 5-ton, 6X6, M939 Series (diesel)** , 1982

**test circuit breaker with multimeter: Direct Support, General Support, and Depot Maintenance Manual** , 1991

**test circuit breaker with multimeter: Manuals Combined: Over 20 U.S. Army Locomotive, Rail Car And Railroad Trackage Manuals** , Over 4,100 total pages ... Just a sample of the contents: 256 page Army TRAIN RAILROAD RAILCAR Manual FULL TITLE: MAINTENANCE OF RAILWAY CARS. Published by the Department of the Army on 28 August 1972 (current). 174 page U.S. Technical RAILROAD Design FULL TITLE: Technical Instructions: Railroad Design and Rehabilitation. Published 1 March 2000. 207 page U.S. Navy RAILROAD Handbook FULL TITLE: NAVY RAILWAY OPERATING HANDBOOK, 207 pages. Published by the Department of the Navy, June 1999. U.S. Army RAILROAD LOCOMOTIVE Operations Manual FULL TITLE: RAILWAY OPERATING AND SAFETY RULES. Published by the Department of the Army on 17 July 1989. 139 page Army RAILROAD Rolling Stock Manual Six Lessons; 139 pages on CD-ROM. FULL TITLE: RAILWAY ROLLING STOCK. Published by the Department of the Army on 1 June 1997. 274 page B-B-160 LOCOMOTIVE Operator Manual FULL TITLE: OPERATOR AND UNIT MAINTENANCE MANUAL - LOCOMOTIVE, DIESEL-ELECTRIC, 56-1/2-INCH GAGE, 80-TON, 670 HP, 0-4-4-0 WHEEL, MODEL B-B-160/160-4GE747-A1. Published by the Department of the Army on 22 May

1991. 268 page Army BALDWIN LIMA Locomotive Manual FULL TITLE: OPERATOR AND UNIT MAINTENANCE MANUAL LOCOMOTIVE, DIESEL-ELECTRIC, 56-1/2-INCH GAGE, 60 TON, 500 HP, 0-4-4-0 WHEEL, MODEL RS-4-TC-1A. Published by the Department of the Army on 8 January 1987. 419 page Army GE B-B-160 Locomotive Manual FULL TITLE: INTERMEDIATE DIRECT SUPPORT AND INTERMEDIATE GENERAL SUPPORT MAINTENANCE MANUAL LOCOMOTIVE, DIESEL-ELECTRIC, 56-1/2-INCH GAGE, 80-TON, 670 HP, 0-4-4-0 WHEEL, MODEL B-B-160/160-4GE747-A1. Published by the Department of the Army on 21 July 1987. 396 page B-B-160 LOCOMOTIVE Parts Manual FULL TITLE: UNIT, INTERMEDIATE DIRECT SUPPORT AND GENERAL SUPPORT REPAIR PARTS AND SPECIAL TOOLS LIST LOCOMOTIVE, DIESEL-ELECTRIC, 56-1/2-INCH GAGE, 80-TON, 670 HP, 0-4-4-0 WHEEL, MODEL B-B-160/160-4GE747-A1 NSN 2210-01-158-2980. Published by the Department of the Army on 31 March 1993. 90 page 1955 Davenport LOCOMOTIVE Maintenance Manual FULL TITLE: LOCOMOTIVE DIESEL ELECTRIC 56½ GAGE, 44 TON 0-4-4-0, 400 HP DAVENPORT BESLER Published by the Department of the Army on 8 November 1955.

**test circuit breaker with multimeter: Manuals Combined: Over 40 U.S. Army M35 M35A2 M35A3 M49 M49A1 M49A2 M44 M44A1 Repair Parts, Maintenance And Operator Manuals** , Over 17,200 total pages ... Just a sample of the contents: Parts Technical Manuals 9-2320-386-24P parts manual M35A3 9-2320-204-34P Parts manual LDS 427 engine 9-2320-209-20P Parts manual organizational level 9-2320-209-34P Parts manual Direct and general support 9-2815-210-34 Engine parts manual Mutilfuel engine 9-2320-361-20P Parts manual organizational level 9-2320-361-34P Parts manual Direct and general support Repair Technical Manuals - Organizational Level 9-2320-209-20-2-1 Volume 2 of 3 part 1 of 2 troubleshooting organizational level 9-2320-209-20-2-2 Volume 3 of 3 part 2 of 2 troubleshooting organizational level 9-2320-209-20-3-1 Organizational level maintenance manual 9-2320-209-20-3-2 Organizational level maintenance manual 9-2320-209-20-3-3 Organizational level maintenance manual 9-2320-209-20-3-4 Organizational level maintenance manual 9-2320-209-20-1 Scheduled maintenance organizational level 9-2320-361-20 Organizational level maintenance manual Transmission & Transfer Technical Manuals 9-2520-246-34-1 9-2520-246-34P 9-2520-246-34 Operator Technical Manuals 9-2320-361-10 M35 series operators manual 9-2320-209-10-1 operation, scheduled maintenance 9-2320-209-10-1HR Hand receipt manual (BII) 9-2320-209-10-2 Scheduled maintenance 9-2320-209-10-3 Operator troubleshooting 9-2320-209-10-4 Operator maintenance 9-2320-386-10 M35A3 operators manual Repair Technical Manuals - Direct & General Support 9-2320-209-34-1 Troubleshooting Direct & General support maintenance level 9-2320-209-34-2-2 Direct & General support maintenance level 9-2320-209-34-2-3 Direct & General support maintenance level 9-2320-361-34 Direct & General support maintenance level (newer updated manual) 9-2320-386-24-1-1 M35A3 manual 9-2320-386-24-1-1 M35A3 manual Engine Technical Manuals 9-2815-210-34-1 Troubleshooting manual for the LDS 465 mutilfuel engine 9-2815-210-34-2-1 Engine assembly manual LDS 465 mutilfuel engine part 1 of 2 9-2815-210-34-2-2 Engine assembly manual LDS 465 mutilfuel engine part 2 of 2 9-2815-204-35 Engine repair manual for the LDS-427-2 mutilfuel engine 9-2815-226-34 Pump fuel metering, mutilfuel engines (all)

**test circuit breaker with multimeter: Operator, Organizational, Direct Support and General Support Maintenance Manual** , 1989

**test circuit breaker with multimeter: Manuals Combined: U.S. Army M813 M813A1 M814 5 Ton Cargo Truck - Repair Operator Parts Tech Pubs** , Over 5,100 total pages ... CONTENTS: Operator Manual - 414 pages - June 14, 1985 - w/Changes 1-4 TM 9-2320-260-10 TO 36A12-1C-481 Depot Repair Manual Vol 1 - 653 pages - July 1, 1994 TM 9-2320-260-34-1 TO 36A12-1C-1122-1 Depot Repair Manual Vol 2 - 865 pages - June 1, 1994 TM 9-2320-260-34-2 TO 36A12-1C-1122-2 Unit Repair Manual - 1339 pages - April 1, 1995 TM 9-2320-260-20 TO 36A12-1C-491 Parts List Vol 1 - 696 pages - September 1, 2003 TM 9-2320-260-24P-1 TO 36A12-1C-382-1 Parts List Vol 2 - 1020 pages - September 1, 2003 TM 9-2320-260-24P-2 TO 36A12-1C-382-2 Transportability Guidance - 78 pages - July 17, 1986 - w/Change 1 TM 55-2320-260-15-1 Hand Receipt - 20 pages - January 31,

1979 TM 9-2320-260-10-HR Lubrication Order - 35 pages - November 4, 1983 TM 9-2320-260-12  
The manuals cover the following U.S. Army vehicles: M812A1 Truck, Chassis, Rocket Launcher (2320-00-050-9040) M813 Truck, Cargo (2320-00-050-8902 & 2320-00-050-8890) M813A1 Truck, Cargo (2320-00-050-8913 & 2320-00-050-8905) M809 Series Trucks, Diesel, 5-Ton, 6x6 M810 Truck, Chassis (2320-00-051-0586 & 2320-00-051-0585) M814 Truck, Cargo (2320-00-050-8988 & 2320-00-050-8987) M815 Truck, Bolster, Logging (2320-00-050-8927) M816 Truck, Wrecker, Medium (2320-00-051-0489) M817 Truck, Dump (2320-00-050-8970 & 2320-00-051-0589) M818 Truck, Tractor (2320-00-050-8984 & 2320-00-050-8978) M819 Truck, Tractor, Wrecker (2320-00-050-9004) M820A1 Truck, Van, Expansible (2320-00-050-9007) M820A2 Truck, Van, Expansible (2320-00-050-9010) M821 Truck, Stake, Bridge Transporting (2320-00-050-9015) NHC-250 Cummins 6 Cylinder Diesel Engine M820 Truck, Van, Expansible (2320-00-050-9006)

**test circuit breaker with multimeter:** *Manuals Combined: U.S. Army M809 M110 M112 M113 6X6 5-Ton Diesel Truck Operator Repair Parts Manuals* , Over 5,100 total pages ....

CONTENTS: Operator Manual - 414 pages - June 14, 1985 - w/Changes 1-4 TM 9-2320-260-10 TO 36A12-1C-481 Unit Repair Manual - 1339 pages - April 1, 1995 TM 9-2320-260-20 TO 36A12-1C-491 Depot Repair Manual Vol 1 - 653 pages - July 1, 1994 TM 9-2320-260-34-1 TO 36A12-1C-1122-1 Depot Repair Manual Vol 2 - 865 pages - June 1, 1994 TM 9-2320-260-34-2 TO 36A12-1C-1122-2 Parts List Vol 1 - 696 pages - September 1, 2003 TM 9-2320-260-24P-1 TO 36A12-1C-382-1 Parts List Vol 2 - 1020 pages - September 1, 2003 TM 9-2320-260-24P-2 TO 36A12-1C-382-2 Hand Receipt - 20 pages - January 31, 1979 TM 9-2320-260-10-HR Lubrication Order - 35 pages - November 4, 1983 TM 9-2320-260-12 Transportability Guidance - 78 pages - July 17, 1986 - w/Change 1 TM 55-2320-260-15-1 These manuals cover the following vehicles: M809 Series Trucks, Diesel, 5-Ton, 6x6 M810 Truck, Chassis (2320-00-051-0586 & 2320-00-051-0585) M812A1 Truck, Chassis, Rocket Launcher (2320-00-050-9040) M813 Truck, Cargo (2320-00-050-8902 & 2320-00-050-8890) M813A1 Truck, Cargo (2320-00-050-8913 & 2320-00-050-8905) M814 Truck, Cargo (2320-00-050-8988 & 2320-00-050-8987) M815 Truck, Bolster, Logging (2320-00-050-8927) M816 Truck, Wrecker, Medium (2320-00-051-0489) M817 Truck, Dump (2320-00-050-8970 & 2320-00-051-0589) M818 Truck, Tractor (2320-00-050-8984 & 2320-00-050-8978) M819 Truck, Tractor, Wrecker (2320-00-050-9004) M820 Truck, Van, Expansible (2320-00-050-9006) M820A1 Truck, Van, Expansible (2320-00-050-9007) M820A2 Truck, Van, Expansible (2320-00-050-9010) M821 Truck, Stake, Bridge Transporting (2320-00-050-9015) NHC-250 Cummins 6 Cylinder Diesel Engine

**test circuit breaker with multimeter:** Technical Manual, Direct and General Support and Depot Maintenance Manual , 1990

**test circuit breaker with multimeter:** *Direct Support and General Support Maintenance Manual for Tank, Combat, Full-tracked, 105-mm Gun, M60A3 (2350-00-148-6548) and (2350-01-061-2306 TTS Turret* , 1987

**test circuit breaker with multimeter: Manuals Combined: 150+ U.S. Army Navy Air Force Marine Corps Generator Engine MEP APU Operator, Repair And Parts Manuals** , Over 36,000 total pages .... Just a SAMPLE of the CONTENTS by File Number and TM Number:: 013511 TM 5-6115-323-24P 4 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 1.5 K SINGLE PHASE, AC, 120/240 V, 28 VDC (LESS ENGINE) DOD MODELS MEP-015A, 60 HZ (NSN 6115-00-889-1446) AND (DOD MODEL MEP-025A) 28 VDC (6115-00-017-8236) {TO 35C2-3-385-4; SL 4-07609A/07610A} 013519 TM 5-6115-329-25P 1 GENERATOR SET, GASOLINE ENGINE DR (LESS ENGINE) 0.5 KW, AC, 120/240 V, 60 HZ, 1 PHASE (DOD MODEL (FSN 6115-923-4469); 400 HZ (MODEL MEP-019A) (6115-940-7862) AN DC (MODEL MEP-024A) (6115-940-7867) {TO 35C2-3-440-14} 013537 TM 5-6115-457-12 7 GENERATOR SET, ENGINE DRIVEN, TACTICAL, SKID MTD; 100 KW, 3 PHASE, 4 WIRE, 120 240/416 V (DOD MODELS MEP-007A), UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9101), (MODEL MEP-106A) PRECISE CLASS, 50/60 H (6115-00-133-9102), (MODEL MEP-116A) PRECISE CLASS, 400 KW (6115-00-133-9103) INCLUDING OPTIONAL KITS (MODEL MEP-007 AWF) WINTERIZATION KIT,

FUEL BURNING (6115-00-463-9082), (MEP-007AWE WINTERIZATION KIT, ELECTRIC (6115-00-463-9084), (MODEL MEP-007A DUMMY LOAD KIT (6115-00-463-9086) AND (MODEL MEP-007AWM) WHEEL 013538 TM 5-6115-457-34 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID 100 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MODELS MEP0 UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9101); (MODEL MEP106A) CLASS, 50/60 HZ (6115-00-133-9102) AND (MODEL MEP116A), PRECISE 400 HZ (6115-00-133-9103); INCLUDING OPTIONAL KITS (DOD MODELS MEP007AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463-9082); MEP007AWE) WINTERIZATION KIT, ELECTRIC (6115-00-463-9084); (MOD MEP007ALM) DUMMY LOAD KIT (6115-00-463-9086) AND (MODEL MEP007A MOUNTING KIT (6 013540 TM 5-6115-458-24P 9 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD., 2 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS, DOD MODELS MEP009A UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9104) AND MODEL MEP108A PRECISE CLASS, 50/60 HZ (6115-00-935-8729) INCLUDING OPTIONAL K DOD MODELS MEP009AWF, WINTERIZATION KIT, FUEL BURNING (6115-00-403-3761), MODEL MEP009AWE, WINTERIZATION KIT, ELECTRIC (6115-00-489-7285) 013545 TM 5-6115-465-12 19 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 30 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 V (DOD MODEL MEP-005A), UTILITY CLASS, 50/6 (NSN 6115-00-118-1240), (MODEL MEP-104A), PRECISE CLASS, 50/60 (6115-00-118-1247), (MODEL MEP-114A), PRECISE CLASS, 400 HZ (6115-00-118-1248) INCLUDING AUXILIARY EQUIPMENT (DOD MODEL MEP WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083), (MODEL MEP- WINTERIZATION KIT, ELECTRIC (6115-00-463-9085), (MODEL MEP-005A LOAD BANK KIT (6115-00-463-9088) AND (MODEL MEP-005AWM), WH 013547 TM 5-6115-465-34 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTIC SKID MTD, 30 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MO MEP-005A), UTILITY, 50/60 HZ (NSN 6115-00-118-1240), (MODEL MEP-104A), PRECISE, 50/60 HZ (6115-00-118-1247), (MODEL MEP-114 PRECISE, 50/60 HZ (6115-00-118-1248) INCLUDING OPTIONAL KITS (MODEL MEP-005AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463 (MODEL MEP-005AWE) WINTERIZATION KIT, ELECTRIC (6115-00-463-908 (MODEL MEP-005ALM) LOAD BANK KIT (6115-00-463-9088) (MODEL MEP- WHEEL MOUNTING KIT (6115-00 013548 TM 5-6115-545-12 18 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 60 KW, 3 PHASE, 4 WIR 120/208 AND 240/416 VOLTS, DOD MODEL MEP-006A, UTILITY CLASS, 5 (NSN 6115-00-118-1243) DOD MODEL MEP-105A, PRECISE CLASS, 50/60 (6115-00-118-1252) DOD MODEL MEP-115A, PRECISE CLASS, 400 HZ (6115-00-118-1253) INCLUDING OPTIONAL KITS, DOD MODEL MEP006AWF WINTERIZATION KIT, FUEL BURNING (6115-00-407-8314) DOD MODEL MEP006AWE, WINTERIZATION KIT, ELECTRIC (6115-00-455-7693) DOD M MEP006ALM, LOAD BANK KIT (6115-00-407-8322) DOD MODEL MEP006 013550 TM 5-6115-545-34 12 INTERMEDIATE (FIELD) (DIRECT AND GENERAL SUPPORT) AND DEPOT MAINTENANCE MANUAL FOR GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD., 60 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODELS MEP-006A, UTILITY CLASS, 50/60 HZ (FSN 6115-118-1243 MEP-105A, PRECISE CLASS, 50/60 HZ (6115-118-1252) AND MEP-115A, PRECISE CLASS, 400 HZ (6115-118-1253) {TO 35C2-3-444-2; NAVFAC P-8-626-34; TM 00038G-35} 015378 TM 5-6115-323-14 10 GENERATOR GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 1.5 KW, SI PHASE, AC, 120/240 V, 28 V, DC (LESS ENGINE) (DOD MODELS MEP-01 60 HZ (NSN 6115-00-889-1446) AND (MODEL MEP-025A) 28 V DC (6115-00-017-8236) {TO 35C2-3-385-1} 015380 TM 5-6115-332-24P 3 GENERATOR GASOLINE ENGINE: AIR COOLED, 5 KW, AC, 120/240 V, SINGLE PHASE; 120/208 V, 3 PHASE, SKID MOUNTED, TUBULAR FRAME (LESS ENGINE) M DESIGN: 60 HZ (DOD MODEL MEP-017A) (NSN 6115-00-017-8240); 400 (DOD MODEL MEP-022A) (6115-00-017-8241) {TO 35C2-3-424-24} 020611 LO 5-6115-457-12 GENERATOR SET, DIESEL ENGINE DRIVEN; SKID MTD, 100 KW, 3 PHASE, 120/208 AND 240/416 V (DOD MODELS MEP-007A), UTILITY CLASS, 50/ (NSN 6115-00-133-9101); (MODEL MEP-106A) PRECISE CLASS, 50/60 H (6115-00-133-9102) AND (MODEL MEP-116A), PRECISE CLASS, 400 HZ (6115-00-133-9103) 020612 LO 5-6115-458-12 GENERATOR SET, DIESEL ENGINE DRIVEN, SKID



MTD, 200 KW, 3 PHASE, 4 WIRE, 120/208/416 VOLTS, DOD MODELS MEP-009A, UTILITY CLASS, 50/60 HERTZ (NSN 6115-00-133-9104), MEP-108A, PRECISE CLASS, 50 HERTZ (6115-00-935-8729) {LO 07536A-12} 020614 LO 5-6115-465-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MOUNTED, 30 3 PHASE, 4 WIRE, 120/206 AND 240/416 V (DOD MODEL MEP-055A), UT CLASS, 50/60 HZ (NSN 6115-00-118-1240); (MODEL MEP 104A), PRECI CLASS, 50/60 HZ (6115-00-118-1247) AND (MODEL 114A) PRECISE CLA 400 HZ (6115-00-118-1248) 025150 TM 5-6115-271-14 12 GENERATOR SET, GASOLINE ENGINE DRIVEN, S MTD, TUBULAR FRAME, 3 KW, 3 PHASE, AC, 120/208 AND 120/240 V, 2 DC (LESS ENGINE) DOD MODEL MEP-016A, 60 HZ (NSN 6115-00-017-823 MODEL MEP-016C 60 HZ (6115-00-143-3311) MODEL MEP-021A 400 HZ (6115-00-017-8238) MODEL MEP-021C 400 HZ (6115-01-175-7321) MODEL MEP-026A DC HZ (6115-00-017-8239) MODEL MEP-026C 28 V DC (6115-01-175-7320) {TO 35C2-3-386-1; TM 05926A-14; NAVFAC P-8-6 025151 TM 5-6115-271-24P 3 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULA FRAME, 3 KW, 3 PHASE, AC; 120/208 AND 120/240 VOLTS, 28 VDC (LE ENGINE) (DOD MODEL MEP-016A) 60 HERTZ (NSN 6115-00-017-8237) (MEP-021A) 400 HERTZ (6115-00-017-8238) (MEP-026A) 28 VDC HERTZ (6115-00-017-8239) (MEP-016C) 60 HERTZ (6115-01-143-3311) (MEP- 400 HERTZ (6115-01-175-7321) (MEP-026C) 28 VDC HERTZ (6115-01-175-7320) {TO 35C2-3-386-4; SL-4-05926A} 032507 TM 5-6115-275-14 10 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 10 KW, AC, 120/208V PHASE, AND 120/240V, SINGLE PHASE, LESS ENGINE: DOD MODELS MEP- HZ, (NSN 6115-00-889-1447) AND MEP-023A, 400 HZ (6115-00-926-08 {NAVFAC P-8-615-14; TO 35C2-3-452-1} (THIS ITEM IS INCLUDED ON EM 0086, EM 0088 & EM 0127) 032508 TM 5-6115-275-24P 5 GENERATOR, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 10 KW, AC, 120/208 V, 3 PHASE AND 120/240 V, SINGLE PHASE (LESS ENGINE); D MEP-018A, UTILITY CLASS, 60 HZ (NSN 6115-00-889-1447) AND MEP-0 PRECISE CLASS, 400 HZ (6115-00-926-0843) {NAVFAC P8-615-24P; TO 35C2-3-452-4} (THIS ITEM IS INCLUDED ON EM 0086, EM 0088 & EM 0127) 032551 TM 5-6115-584-12 11 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 5 KW, 1 PHASE, 2 WIRE; 1 PHASE, 3 WIRE; 3 PHASE, 4 WIRE, 120, 120/240 AND 120/208 V (DOD MODEL MEP-002A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) {NAVFAC P-8-622-12; TO 35C2-3-456-1; TM 05682C-12} 032640 TM 5-6115-585-12 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 10 KW, 1 PHASE, 2 WIRE 1 PHASE, 3 WIRE AND 3 PHASE, 4 WIRE; 120, 120/240 AND 120/208 V (DOD MODEL MEP-003A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1030 AND (MODEL MEP-112A), UTILITY CLASS, 400 HZ (6115-00-465-1027) {NAVFAC P-8-623-12; TO 35C2-3-455-1; TM-05684C/05685B-12} 032781 TM 5-6115-584-34 8 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MOUNTED, 5 KW, 1 PHASE, 2 WIRE, 1 PHASE, 3 WIRE, 3 PHASE, 120, 120/240 AND 120/208 V (DOD MODEL MEP-002A), UTILITY CLASS, (NSN 6115-00-465-1044) {NAVFAC P-8-622-34; TO 35C2-3-456-2; TM 0568C-34} 032936 TM 5-6115-329-14 4 GENERATOR SET GASOLINE ENGINE DRIVEN, 0.5 KW (LESS ENGINE) (DOD MODEL MEP-014 UTILITY CLASS, 60 HZ) (NSN 6115-00-923-4469), (DOD MODEL MEP-01 UTILITY CLASS, 400 HZ (6115-00-940-7862) AND (DOD MODEL MEP-024 UTILITY CLASS, 28 VDC (6115-00-940-7867) {TO 35C2-3-440-1} 033374 TM 5-6115-332-14 10 GENERATOR SET, TAC GASOLINE ENGINE: AIR COOLED, 5 KW, AC, 120/240 V, SINGLE PHASE, V, 3 PHASE, SKID MOUNTED, TUBULAR FRAME (LESS ENGINE) (MILITARY DOD MODEL MEP-017A), UTILITY, 60 HZ (NSN 6115-00-017-8240) AND MODEL MEP-022A), UTILITY, 400 HZ (6115-00-017-8241) {NAVFAC P-8-614-14; TO 35C2-3-424-1} 033750 TM 5-6115-585-34 9 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MOUNTED, 10 KW, 1 PHASE, 2 WIRE, 1 PHASE, 3 WIRE, 3 PHASE, 4 WIRE, 120, 120/240 AND 120/208 VOLTS (DOD MODEL MEP-003A), UT CLASS, 60 HZ (NSN 6115-00-465-1030) {NAVFAC P-8-623-12; TO 35C2-3-455-2; TM-05684C/05685B-34} 034072 TM 5-6115-585-24P 5 GENERATOR SET, DIESEL ENGINE DRIVEN, TA SKID MTD, 10 KW, 1 PHASE, 2 WIRE; 1 PHASE, 3 WIRE; 3 PHASE, 4 W 120, 120/240 AND 120/208 V (DOD MODELS 003A), UTILITY CLASS, 60 (NSN 6115-00-465-1030) AND (MODEL MEP-112A), UTILITY CLASS, 400 (6115-00-465-1027) {NAVFAC P-8-623-24P; TO

35C2-3-455-4; SL-4-05684C/06585B} 040180 TM 5-6115-584-12-HR HAND RECEIPT MANUAL COVERING END ITEM/COMPONENTS OF END ITEM (C BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AAL GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 5 KW, 1 WIRE; 1 PH, 3 WIRE; 3 PH, 4 WIRE, 120, 120/240 AND 120/208 V (DOD MODEL MEP-002A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) 040833 TM 5-6115-458-12-HR HAND RECEIPT MANUAL COVERING THE END ITEM/COMPONENTS OF END ITE BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AA GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MOUNTED, 20 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MODEL MEP-009A), UT CLASS, 50/60 HZ (NSN 6115-00-133-9104) AND (DOD MODEL MEP-108A) PRECISE CLASS, 50/60 HZ (6115-00-935-8729) 040843 TM 5-6115-593-34 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD, 500 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODEL, MEP-029A, CLASS UTILITY, 50/60 HZ, (NSN 6115-01-030- DOD MODEL, MEP-029B, CLASS UTILITY, 50/60 HZ, (6115-01-318-6302 INCLUDING OPTIONAL KITS DOD MODEL, MEP-029AHK, HOUSING KIT, (6115-01-070-7550), DOD MODEL, MEP-029ACM, AUTOMATIC CONTROL MO (6115-01-275-7912) DOD MODEL, MEP-029ARC, REMOTE CONTROL MODULE (6110-01-070-7553) DOD MODEL, MEP-029ACC, REMOTE CONTROL CABLE, (6110-01-087-4127) {NAVFAC P-8 041070 TM 5-6115-593-12 GENERATOR SET, ENGINE DRIVEN, TACTICAL SKID MTD, 500 KW, 3 PHASE, 4 WIRE; 120/ 240/416 VOLTS DOD MODEL MEP-029A; CLASS UTILITY, HERTZ 50/60; (NSN 6115-01-030-6085); MEP-029B; UTILITY; 50/60; (6115-01-318- INCLUDING OPTIONAL KTS DOD MODELS MEP-029AHK; NOMENCLATURE HOUS (6115-01-070-7550) MEP-029ACM; AUTOMATIC CONTROL MODULE; (6115-01-275-7912); MEP-029ARC, REMOTE CONTROL MODULE, (6110-01-070-7553); MEP-029ACC, REMOTE CONTROL CABLE (6110-01-087-4127) {TO 35C2-3-463-1} 041338 LO 55-1730-229-12 POWER UNIT, AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU), WHEEL MOUNTED, SELF-PROPELLED, TOWABLE DOD MODEL-MEP-360A, CLASS-PRECISE, HERTZ-400, (NSN 1730-01-144-1897 042791 TM 5-6115-457-12-HR HAND RECEIPT MANUAL COVERING THE BASIC ISSUE ITEMS (BII) FOR GE SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD; 100 KW, 3 PHASE, 120/208 AND 240/416 V (DOD MODELS MEP007A), UTILITY CLASS, 50/6 (NSN 6115-00-133-9101), (MODEL MEP-106A), PRECISE CLASS, 50/60 (6115-00-133-9102) AND (MODEL MEP116A) PRECISE CLASS, 400 HZ (6115-00-133-9103) 043437 TM 5-6115-593-24P 1 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 500 KW, 3 PHA 4 WIRE; 120/208 AND 240/416 VOLTS DOD MODEL MEP-029A UTILITY CL 50/60 HZ (NSN 6115-01-030-6085) MEP-029B UTILITY CLASS, 50/60 (6115-01-318-6302) INCLUDING OPTIONAL KITS DOD MODEL MEP-029AHK HOUSING KIT (6115-01-070-7550) MEP-029ACM AUTOMATIC CONTROL MOD (6115-01-275-7912) MEP-029ARC REMOTE CONTROL MODULE (6110-01-070-7553) MEP-029ACC REMOTE CONTROL CABLE (6110-01-087 {NAVFAC P-8-631-24P; TO 35C2-3-463-4} 044703 TM 5-6115-545-12-HR HAND RECEIPT MANUAL COVERING COMPONENTS OF END ITEM (COEI), BAS ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AAL) FOR GENERA DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 60 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 V (DOD MODELS MEP-006A) UTILITY CLASS, 50/6 (NSN 6115-00-118-1243), (MODEL MEP-105A) PRECISE CLASS, 50/60 H (6115-00-118-1252) AND (MODEL MEP-115A) PRECISE CLASS, 400 HZ (6115-00-118-1253) 050998 TM 5-6115-600-12 8 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 100 KW, 3 PHASE, 4 WIR 120/208 AND 240/416 V (DOD MODEL MEP-007B) CLASS UTILITY, 50/60 (NSN 6115-01-036-6374) INCLUDING OPTIONAL KITS, DOD MODEL MEP00 WINTERIZATION KIT, FUEL BURNING AND MEP007BWE WINTERIZATION KIT ELECTRIC 051007 TM 5-6115-600-24P 4 GENERATOR SET, DIESEL ENGINE DRIVEN, 100 KW, 3 PHASE, 4 WIRE, 120/208 AND VOLTS (DOD MODEL MEP-007B), UTILITY CLASS, 50/60 HZ (NSN 6115-01-036-6374) INCLUDING OPTIONAL KITS, DOD MODEL MEP007BWF, WINTERIZATION KIT, FUEL BURNING AND MEP007BWE WINTERIZATION KIT, ELECTRIC {TO 35C2-3-442-14; NAVFAC P-8-628-24P; SL-4-07464B} 057268 LO 5-6115-600-12 GENERATOR SET, DIESEL ENGINE DRIVEN; TACTICAL, SKID MTD, 100 KW PHASE, 4 WIRE; 120/208 AND 240/416 V (DOD MODEL

MEP007B), CLASS UTILITY, 50/60 HZ (NSN 6115-01-036-6374) 057513 LO 5-6115-604-12 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE; SKID MT 750 KW, 3 PHASE, 4 WIRE; 2400/4160 AND 2200/3800 VOLTS (DOD MOD MEP208A) CLASS PRIME UTILITY, HZ 50/60 (NSN 6115-00-450-5881) {LI 6115-12/9} 060183 TM 5-6115-612-24P 6 GENERATOR SET, AVIATION, GAS TURBINE ENGINE DRIVEN, INTEGRA TRAILER MOUNTED, 10KW, 28 VOLTS MODEL MEP-362A, PRECISE, DC (NSN 6115-01-161-3992) {TM 6115-24P/1; AG-320B0-IPE-000; TO 35C2-3-471-4} 060188 TM 5-6115-612-34 4 GENERATOR SET, AVIATION, GAS TURBINE ENG DRIVEN, INTEGRAL TRAILER MOUNTED 10KW 28 VOLTS DOD MODEL MEP 36 PRECISE, DC, (NSN 6115-01-161-3992) {AG-320BO-MME-000; TM 6115- TO 35C2-3-471-2} 060645 LO 5-6115-612-12 AVIATION GENERATOR SET, GAS TURBINE, ENGINE DRIVEN, INTEGRAL TR MOUNTED, 10KW, 28 VOLTS DC DOD MODEL MEP 362A CLASS PRECISE (NSN 6115-01-161-3992) 060921 TM 55-1730-229-34 5 POWER UNIT, AVIATION, MULTI-OUTPUT GTED, ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU) WHEEL MOUNTED, SELF-PROPELLED, TOWA AC 400HZ, 3PH, 0.8 PF, 115/200V, 30 KW, DC 28VDC 700 AMPS, PNEUMATIC, 60 LBS/MIN. AT 40 PSIG, HYDRAULIC, 15 GPM AT 3300 PS DOD MODEL MEP-360A, CLASS PRECISE, 400 HERTZ, (NSN 1730-01-144- {AG 320A0-MME-000; TO 35C2-3-473-2; TM 1730-34/1} 060922 TM 55-1730-229-12 8 POWER UNIT, AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU) WHEEL MOUNTED, SELF-PROPELLED, TOWABLE, AC 400HZ, 3PH, 0.8 PF, 115/200V, 30 KW, DC 28 VDC 700 AMPS, PNEUMATIC 60 LBS/M AT 40 PSIG, HYDRAULIC 15 GPM AT 3300 PSIG, DOD MODEL MEP-360A, CLASS PRECISE, HERTZ 400, (NSN 1730-01-144-1897) {AG 320A0-OMM-000; TO 35C2-3-473-1; TM 1730-12/1} 061758 LO 5-6115-614-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD. 200 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS MODEL MEP009B, UTILI 50/60 HERTZ, (NSN 6115-01-021-4096) 061772 LO 5-6115-622-12 GENERATOR SET, DIESEL ENGINE-DRIVEN, WHEEL MOUNTED 750-KW, 3-PH 4-WIRE, 2200/3800 AND 2400/4160 VOLTS CUMMINS ENGINE COMPANY IN MODEL KTA-2300G-2 DOD MODEL MEP-012A; CLASS UTILITY; HERTZ 062762 LO 5-6115-615-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 3 K MODEL 016B; CLASS UTILITY MODE 50/60 HZ (NSN 6115-01-150-4140); DOD MODEL MEP-021B; CLASS UTILITY; MODE 400 HZ (6115-01-151-812 DOD MODEL MEP-026B; CLASS UTILITY; MODE 28 VDC (6115-01-150-036 {LI 05926B/06509B-12/5; P-8-646-LO} 064310 TM 5-6115-626-14&P 2 POWER UNIT PU-406B/M (NSN 6115-00-394-9576) MEP-005A 30 KW 60 HZ GENERATOR SET M200A1 2-WHEEL4-TIRE, MODIFIED TRAILER 064390 TM 5-6115-632-14&P 5 POWER UNIT PU-753/M (NSN 6115-00-033-1 MEP-003A 10 KW 60 HZ GENERATOR SET M116A2 2-WHEEL, 2-TIRE, MODI TRAILER 064392 TM 5-6115-629-14&P 3 POWER PLANT AN/AMJQ-12A (NSN 6115-00-257-1602) (2) MEP-006A 60HZ, GENERATOR SETS (2) M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAIL 064443 TM 5-6115-625-14&P 2 POWER UNIT PU-405A/M (NSN 6115-00-394-9577) MEP-004A 15 KW 60 HZ GENERATOR SET M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER (THIS ITEM IS INCLUDED ON EM 0086 & EM 0087) 064445 TM 5-6115-633-14&P 4 POWER PLANT AN/MJQ-18 (NSN 6115-00-033-1398) (2) MEP-003A 1 60 HZ GENERATOR SETS M103A3 2-WHEEL 1 1/2 TON MODIFIED TRAILER 064446 TM 5-6115-628-14&P 4 POWER PLANT AN/MJQ-15 (NSN 6115-00-400-7591) (2) MEP-113A 1 400 HZ GENERATOR SETS, (2) M200A1 2-WHEEL, 4-TIRE, MODIFIED TRA (THIS ITEM IS INCLUDED ON EM 0086) 064542 TM 5-6115-631-14&P 4 POWER PLANT AN/MJQ-16 (NSN 61 15-00-033-1395) (2) MEP-002A 5 KW 60 HZ GENERATOR SETS M103A3 2-WHEEL, 2-TIRE, MODIFIED TRAI 065071 TM 55-1730-229-24P 6 POWER AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDAULIC, PNEUMATIC (AG WHEEL MOUNTED, SELF-PROPELLED, TOWABLE AC 400 HZ, 3 PH, 0.8 PF, 115/200V, 30 KW DC 28 VDC 700 AMPS PNEUMATIC 60 LBS/MIN. AT 40 HYDRAULIC 15 GPM AT 3300 PSIG DOD MODEL MEP-360A, CLASS PRECISE 400 HERTZ (NSN 1730-01-144-1897) {TO 35C2-3-473-4; TM 1730-24P/ AG 320A0-IPB-000} 065603 TB 5-6115-593-24 WARRANTY PROGRAM FOR GENERATOR SET DOD MODEL MEP-029A HOUSING K DOD MODEL MEP-029AHK 066727 TM 5-6115-640-14&P 2 POWER AN/MJQ-32 (NSN 6115-01-280-2300) AN/MJQ-33

(6115-01-280-2301) ( MEP-701A 3KW 60 HZ ACOUSTIC SUPPRESSION KIT GENERATOR SETS M116 2-WHEEL, 2-TIRE, 3/4-TON MODIFIED TRAILERS 066808 TM 5-6115-627-14&P 2 POWER PLANT AN/MJQ-10A (NSN 6115-00-394-9582); (2) MEP-005A 30 KW 60 HZ GEN SETS; (2) M200A1 2-WHEEL, 4 TIRE MODIFIED TRAILERS 066809 TM 5-6115-630-14&P 4 POWER UNIT, PU-751/M (NSN 6115-00-033-1373) MEP-002A, 5 KW, 60 HZ GENERATOR SET M116A1 2-WHEEL, 2-TIRE, MODIFIED TRAILER 066824 TM 5-6115-465-10-HR 1 HAND RECEIPT MANUAL COVERING END ITEM/COMPONENTS OF END ITEM (C BASIC ISSUE ITEMS, (BII) AND ADDITIONAL AUTHORIZATION LIST (AAL GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 30K 4 WIRE, 120/208 AND 240/416 VOLTS - MEP-005A, UTILITY, 50/60 HE (NSN 6115-00-118-1240); MEP-104A, PRECISE, 50/60 HERTZ, (6115-00-118-1247): MEP-114A, PRECISE, 400 HERTZ, (6115-00-118- INCLUDING AUXILIARY EQUIPMENT MEP-005AWF WINTERIZATION KIT, FUE BURNING (6115-00-463-9083); MEP-005AWE, WINTERIZATION KIT, ELEC (6115-00 067310 TM 9-6115-650-14&P 1 POWER PLAN AN/MJQ-25 (NSN 6115-01-153-7742) (2) MEP-112A 10 KW 400 HZ GENE SETS M103A3 2-WHEEL, 2-TIRE, MODIFIED TRAILER 067311 TM 9-6115-653-14&P 2 POWER UNIT PU-732/M (NSN 6115-00-260-3082) MEP-113A 15 KW 400 HZ GENERATOR SET M200 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067544 TM 9-6115-652-14&P 1 POWER UNIT PU-760/M (NSN 6115-00-394-9581) MEP-114A 30 KW 400 HZ GENERATOR M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067632 TM 9-6115-648-14&P POWER UNIT PU-650B/G (NSN 6115-00-258-1622) MEP-006A 60 KW 60 HZ GENERATOR M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067744 TM 9-6115-646-14&P 1 POWER UNIT PU-495A/G, (NSN 6115-00-394-9575) AND PU-495B/G, (6115-01-134-0 MEP-007A 100 KW, 60 HZ OR MEP-007B, 100 KW, 60 HZ GENERATOR SET M353-2-WHEEL, 2-TIRE MODIFIED TRAILER 067746 TM 9-6115-651-14&P POWER UNIT 707A/M (NSN 6115-00-394-9573) MEP-115A, 60 KW, 400 HZ GENERATOR M200A1, 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067879 TM 9-6115-647-14&P 1 POWER UNIT PU-789/M (NSN 6115-01-208-9827) MEP-114A, 30 KW 400 HZ GENERATOR SET M353 2-WHEEL, 2-TIRE, MODIFIED TRAILER 069601 TM 9-6115-464-10-HR HAND RECEIPT MANUAL COVERING THE END ITEMS/COMPONENTS OF END IT (COEI), BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION L (AAL) FOR GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MO 15 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODEL MEP UTILITY CLASS, 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP PRECISE CLASS, 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113 PRECISE CLASS, 400 HERTZ (6115-00-118-1244) 069602 LO 9-6115-464-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD, 15KW, 4 WIRE, 120/208 AND 240/416 VOLTS (DOD MODEL MEP 004A) (NSN 6115-00-118-1241); (DOD MODEL MEP 104A) (6115-00-118-1245) (DOD MODEL MEP-113A) (6115-00-118-1244) 069954 TM 9-6115-465-24P 2 GENERATOR SET, DIESEL ENGINE DRIVE TACTICAL SKID MTD. 30KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V MODELS; MEP-005A, UTILITY, 50/60 HZ, (NSN 6115-00-118-1240), MEP-104A PRECISE, 50/60 HZ, (6115-00-118-1247), MEP-114A, PRECISE, 400 H (6115-00-118-1248), INCLUDING OPTIONAL KITS, DOD MODELS; MEP-00 WINTERIZATION KIT, FUEL BURNING, (6115-00-463-9083), MEP-005-AW WINTERIZATION KIT, ELECTRIC, (6115-00-463-9085), MEP-002-ALM, L BANK KIT, (6115-00-463-9088), MEP-005-AWM, WHEEL MOUNTING KIT, (6115-00-463-9094) {TO-35C2-3-070096 TM 9-6115-464-24P 1 GENERATOR S DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 15KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 VOLTS (DOD MODEL MEP-004A) UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) (DOD MODEL MEP-103A) PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) (DOD MODEL MEP-113A) PRECI CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS (DOD MODEL MEP-005-AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463 (DOD MODEL MEP-005-AWE) WINTERIZATION KIT, ELECTRIC (6615-00-46 (DOD MODEL MEP-004-ALM) LOAD BANK KIT (6115-00-191-9201 071025 TM 9-6115-641-10 2 GENERATOR SET SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A (60 HZ) (NSN 6115-01-274-7387) MEP-812A (400 HZ) (6115-01-274-7391) {TO 35C2-3-456-11} 071026 TM 9-6115-642-10 2 GENERATOR SET SKID MOUNTED, TACTICAL QUIE 10 KW, 60 AND 400 HZ

MEP-803A (60 HZ) (NSN 6115-01-275-5061) MEP-813A (400 HZ) (6115-01-274-7392) {TO 35C2-3-455-11; TM 09247A/09248A-10/1} 071028 TM 9-6115-643-10 3 GENERATOR SET, SKID MOUNTED, TACTICAL QUI 15 KW, 50/60 AND 400 HZ MEP-804A (50/60 HZ) (NSN 6115-01-274-73 MEP-814A (400 HZ) (6115-01-274-7393) {TO 35C2-3-445-21} 071029 TM 9-6115-644-10 2 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A (50/60 HZ), (NSN 6115-01-274-7389) MEP-815A (400 HZ), (6115-01-274-7394) {TO 35C2-3-446-11; TM 09249A/09246A-10/1} 071030 TM 9-6115-645-10 2 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806A (50/60 HZ), (NSN 6115-01-274-7390) MEP-816A (400 HZ), (6115-01-274-7395) {TO 35C2-3-444-11; TM 09244A/09245A-10/1} 071031 LO 9-6115-641-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A TACTICAL QUIET 60 HZ (NSN 6115-01-274-7387) MEP-812A TACTICAL QUIET 400 HZ (6115-01-274-7391) 071032 LO 9-6115-642-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A TACTICAL QUIET 60 HZ (NSN 6115-01-275-5061) MEP-813A TACTICAL QUIET 400 HZ (6115-01-274-7392) 071033 LO 9-6115-643-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 15 KW, 50/60/400 HZ MEP-804A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7388) MEP-814 TACTICAL QUIET 400 HZ (6115-01-274-7393) 071034 LO 9-6115-644-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 40 MEP-805A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7389) MEP-815 TACTICAL QUIET 400 HZ (6115-01-274-7394) {LI 09249A/09246A-12} 071035 LO 9-6115-645-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 40 MEP-806A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7390) MEP-816 TACTICAL QUIET 400 HZ (6115-01-274-7395) {LI 09244A/09245A-12} 071036 TB 9-6115-641-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A AND MEP-812A 071037 TB 9-6115-642-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A AND MEP-813A {SI 09247A/09248A-24} 071038 TB 9-6115-643-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 15 KW, 50/60 AND 400 HZ MEP-804A AND MEP-814A 071039 TB 9-6115-644-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A AND MEP-815A {SI 09249A/09246A-24} 071040 TB 9-6115-645-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806A AND MEP-816A {SI 09244A/09245A-24} 071541 TM 9-6115-464-12 2 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 15 KW, 3 PHASE, 4 WIRE, 120/2 AND 240/416 VOLTS DOD MODEL MED-004A UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP-103A PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113A PRECISE CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS DOD MODEL MEP-005-AWF WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083) DOD MODEL MEP-005-AWE WINTERIZATION KIT, ELECTRIC (6115-00-463-9085) DOD MODEL MEP-004-ALM LOAD BANK KIT (6115-00-291 071604 TM 9-6115-645-24P GENERATOR SET, TACTICAL QUIET 60KW, 50/60/400 HZ (NSN 6115-01-274-7390) (MEP-806A) (6115-01-274-7395) (MEP-816A) {TO 35C2-3-444-14; TM 09244A/09245A-24P/3} 071605 TM 9-6115-642-24P GENERATOR SET, TACTICAL QUIET 10 KW, 60/400 HZ (NSN 6115-01-275-5061) (MEP-803A) (6115-01-274-7392) (MEP-813A) {TO 35C2-3-455-14; TM 09247A/09248A-24P/3} 071610 TM 9-6115-643-24P GENERATOR SET, TACTICAL QUIET 15KW, 50/60 - 400 HZ (NSN 6115-01-274-7388) (MEP-804A) (6115-01-274-7393) (MEP-814A) {TO 35C2-3-445-24} 071611 TM 9-6115-644-24P GENERATOR SET, TACTICAL QUIET 30KW, 50/60-400 HZ (NSN 6115-01-274-7389) (MEP-805A) (6115-01-274-7394) (MEP-815A) {TO 35C2-3-446-14; TM 09249A/09246A-24P/3} 071613 TM 9-6115-641-24P GENERATOR SET, TACTICAL QUIET 5 KW, 60/400 HZ (NSN 6115-01-274-7387) (MEP-802A) (6115-01-274-7391) (MEP-812A) {TO 35C2-3-456-14} 071713 TM 9-6115-645-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60KW, 50/60 AND 400 HZ MEP-806A (50/60 HZ) (NSN 6115-01-274-7390) MEP-816A (400 HZ) (6115-01-274-7395) {TO 35C2-3-444-12; TM 09244A/09245A-24/2} 071748 TM 9-6115-644-24 1 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A (50/60 HZ) (NSN 6115-01-274-7389) MEP-815A (400 HZ) (6115-01-274-7394) {TO

35C2-3-446-12; TM 09249A/09246A-24/2} 071749 TM 9-6115-643-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 15 KW, 50/60 AND 400 HZ MEP-804A (50/60 HZ) (NSN 6115-01-274-7388) MEP-814A (400 HZ) (6115-01-274-7393) {TO 35C2-3-445-22} 071750 TM 9-6115-642-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A (60 HZ) (NSN 6115-01-275-5061) MEP-813A (400 HZ) (6115-01-274-7392) {TO 35C2-3-455-12; TM 09247A/09248A-24/2} 071751 TM 9-6115-641-24 3 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A (60 HZ) (NSN 6115-01-274-7387) MEP-812A (400 HZ) (6115-01-274-7391) {TO 35C2-3-456-12} 072239 TM 9-6115-464-34 1 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 15 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 VOLTS DOD MODEL MEP-004A UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP 103A PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113A PRECISE CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS DOD MODEL MEP-005AWF WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083) DOD MODEL MEP-005AWE WINTERIZAT KIT, ELECTRIC (6115-00-463-9085) DOD MODEL MEP-004ALM LOAD BANK KIT (6115-00-291-920 073744 TM 9-6115-604-24P 1 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE SKID MOUNTED, 750KW, 3 PHASE, 4 WIRE, 2400/4160, AND 2200/3800 VOLTS DOD MODEL MEP208A PRIME UTILITY CLASS 50/60 HERTS (NSN 6115-00-450-5881) DOD MODEL 80-1466 REMOTE CONTROL MODULE CLASS (6115-01-150-5284 DOD MODEL 80-7320 SITE REQUIREMENTS MODULE CLASS (6115-01-150-5 {NAVFAC P-8-633-24P} 074040 TM 9-6115-545-24P GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD., 60 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS, D MODELS MEP-006A, UTILITY CLASS, 50/60 H/Z, (NSN 6115-00-118-124 MEP-105A, PRECISE CLASS, 50/60 H/Z, (6115-00-118-1252), MEP-115 PRECISE CLASS, 400 H/Z (6115-00-118-1253); INCLUDING OPTIONAL K DOD MODELS MEP-006AWF, WINTERIZATION FUEL BURNING, (6115-00-407 MEP-006AWE, WINTERIZATION KIT, ELECTRIC, (6115-00-455-7693), ME LOAD BANK KIT, (6115-00-407-8322), AND MEP-006AWM, WHEEL MOUNTI (6115-00-463-9092) {TO 074212 TM 9-6115-604-12 GENERATOR SET, DIESEL DRIVEN, AIR TRANSPORTABLE SKID MTD., 750 KW, 3 PHASE, 4 WIRE, 24 AND 2200/3800 V (DOD MODEL MEP 208A) CLASS PRIME UTILITY, HZ 50 (NSN 6115-00-450-5881) {NAVFAC P-8-633-12} 074896 TM 9-6115-604-34 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE SKID MTD., 750 KW, 3 PHASE, 4 WIRE, 2400/4160 AND 2200/3800 VOLTS DOD MODEL MEP 208A PRIME UTILITY CLASS 50/60 HERTZ (NSN 6115-00-450-5881) {NAVFAC P-8-633-34} 075027 TM 9-6115-584-24P 1 GENERATOR SET, DIESEL E DRIVEN, TACTICAL SKID MTD 5 KW, 1 PHASE -2 WIRE, 1 PHASE -3 WIR 3 PHASE -4 WIRE, 120, 120/240 AND 120/208 VOLTS (DOD MODEL MEP- UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) {NAVFAC P-8-622-24P TO 35C2-3-456-4} 077581 TM 9-6115-673-13&P 2KW MILITARY TACTICAL GENERATOR SET 120 VAC, 60 HZ (NSN 6115-01-435-1565) (MEP-531A) (EIC: LKA) (NSN 6115-21-912-0393) (MECHRON) 28 VDC (NSN 6115-01-435-1567) (MEP-501A) (EIC: LKD) (NSN 6115-21-912-0392) (MECHRON) 078167 TM 9-6115-672-14 GENERATOR SET SKID MOUNTED TACTICAL QUIET 60KW, 50/60 AND 400 HZ, MEP-806B (50/60 HZ) (NSN 6115-01-462-0291) EIC: GGW, MEP-816B (400 HZ) (NSN 6115-01-462-0292) EIC: GGX 078443 TM 9-6115-639-13 1 3KW TACTICAL QUIET GENERATOR SET MEP 831A (60 HZ) (NSN 6115-01-285-3012) (EIC: VG6) MEP 832A (400 HZ) (NSN 6115-01-287-2431) (EIC: VN7) 078490 TM 9-6115-671-14 OPERATOR, UNIT, GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ, MEP-805B (50/60 HZ) (NSN 6115-01-461-9335) (EIC: GGU) MEP-815B (400 HZ) (6115-01-462-0290) (EIC: GGV) 078503 TM 9-6115-671-24P GENERATOR SET SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805B (50/60 HZ) (NSN 6115-01-461-9335) (EIC: GGU) MEP-815B (400 HZ) (NSN 6115-01-462-0290) (EIC: GGV) 078504 TM 9-6115-672-24P GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806B (50/60 HZ) (NSN 6115-01-462-0291) (EIC: GGW) MEP-816B (400 HZ) (NSN 6115-01-462-0292) (EIC: GGX) 078505 TB 9-6115-671-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30KW, 50/60 AND 400 HZ MEP-805B AND MEP-815B PROCURED UNDER CONTRACT

DAAK01-96-D-00620WITH MCII INC 078506 TB 9-6115-672-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30KW, 50/60 AND 400 HZ MEP-806B AND MEP-816B PROCURED UNDER CONTRACT DAAK01-96-D-00620WITH MCII INC 078523 TM 9-6115-664-13&P 5KW, 28VDC, AUXILIARY POWER UNIT (APU) MEP 952B NSN 6115-01-452-6513 (EIC: N/A) 078878 TM 9-6115-639-23P 3KW TACTICAL QUIET GENERATOR SET MEP 831A (60 HZ) (NSN 6115-01-285-3012) (EIC: VG6) MEP 832A (400 HZ) (NSN 6115-01-287-2431) (EIC: VN7) 079379 TB 9-6115-641-13 WINTERIZATION KIT (NSN 6115-01-476-8973) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 5KW, 60 AND 400 HZ MEP-802A (600HZ) (6115-01-274-7387) MEP-812A (400HZ) (6115-01-274-7391) 079460 TB 9-6115-642-13 WINTERIZATION KIT (NSN 6115-01-477-0564) (EIC: N/A) INSTALLED ON GENERATOR KIT, SKID MOUNTED, TACTICAL QUIET, 10KW, 60 AND 400 HZ MEP-803A (60HZ) (6115-01-275-0561) MEP-813A (400HZ) (6115-01-274-7392) 079461 TB 9-6115-643-13 WINTERIZATION KIT (NSN 6115-477-0566) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 15KW, 50/60 AND 400 HZ, MEP-804A (50/60HZ) (6115-01-274-7388) MEP-814A (400HZ) (6115-01-274-7393) 079462 TB 9-6115-644-13 WINTERIZATION KIT (NSN 6115-01-474-8354) (EIC:N/A) INSTALLED ON GENERATOR SET, SKID MOUNTED, 30KW, 50/60 AND 400 HZ MEP-805A (50/60HZ) (NSN 6115-01-274-7389) MEP-815A (400HZ) (NSN 611501-274-7394) 079463 TB 9-6115-645-13 WINTERIZATION KIT (NSN 6115-01-474-8344) (EIC: N/A) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 60KW, 50/60 AND 400 HZ, MEP-806A (50/60HZ) (6115-01-274-7390) MEP-816A (400HZ) (6115-01-274-7395) 080214 TM 9-6115-670-14&P AUXILIARY POWER UNIT, 20KW, 120/240 VAC, 60 HZ, MODEL NO. MEP-903A(SICPS) NSN 6115-01-431-3062 MODEL NUMBER MEP-903B (JTACS) NSN 6115-01-431-3063 MODEL NO MEP-903C9WIN-T) NSN 6115-01-458-5329 (EIC: N/A)

**test circuit breaker with multimeter:** *Kiln Owner's Manual* ,

**test circuit breaker with multimeter:** *HMMWV Diagnostics* , 1990

**test circuit breaker with multimeter:** *Operator, Organizational, Direct, and General Support Maintenance Manual* , 1976

**test circuit breaker with multimeter:** *Operator's, Organizational, Direct Support, and General Support Maintenance Manual for Test Set, STE-M1/FVS (4910-01-112-9655).* , 1988

**test circuit breaker with multimeter:** *Operator, Organizational, Field, and Depot Maintenance Manual* , 1968

**test circuit breaker with multimeter:** *2 1/2 Ton, 6X6, M44A1 and M44A2 Series Trucks (multifuel): pts. 1-2. Troubleshooting, organizational level* , 1981

**test circuit breaker with multimeter:** *Operator's, Organizational, Direct Support, and General Support Maintenance Manual, Including Repair Parts and Special Tools List (including Depot Maintenance Repair Parts and Special Tools List)* , 1990

**test circuit breaker with multimeter:** *Operator, Organizational, Intermediate (field) (direct Support and General Support) and Depot Maintenance Manual* , 1990

**test circuit breaker with multimeter:** *Fundamentals of Medium/Heavy Duty Diesel Engines* Gus Wright, 2015-12-16 Based on the 2014 National Automotive Technicians Education Foundation (NATEF) Medium/Heavy Truck Tasks Lists and ASE Certification Test Series for truck and bus specialists, *Fundamentals of Medium/Heavy Duty Diesel Engines* is designed to address these and other international training standards. The text offers comprehensive coverage of every NATEF task with clarity and precision in a concise format that ensures student comprehension and encourages critical thinking. *Fundamentals of Medium-Heavy Duty Diesel Engines* describes safe and effective diagnostic, repair, and maintenance procedures for today's medium and heavy vehicle diesel engines.

**test circuit breaker with multimeter:** *Operator's Manual* , 1990

**test circuit breaker with multimeter:** *Organizational Maintenance Manual for Truck, Cargo, 5-ton, 8x8, M656 W/winch (FSN 2320-999-8481); Truck, Cargo, 5-ton, 8x8, M656 W/o Winch (FSN 2320-903-0883); Truck, Tractor, 5-ton, 8x8, XM757 W/winch (FSN*

**2320-937-1846); Truck, Tractor ... Truck, Van, Expansible .... , 1990**

**test circuit breaker with multimeter:** *Troubleshooting, organizational level* , 1981

**test circuit breaker with multimeter:** *Duncan Kiln Service Handbook* ,

**test circuit breaker with multimeter:** Aviation Electrician's Mate 3 & 2 United States. Bureau of Naval Personnel, 1965

**test circuit breaker with multimeter:** Operator's and Organizational Maintenance Manual , 1990

Back to Home: <https://www2.axtel.mx>